


■計測位置

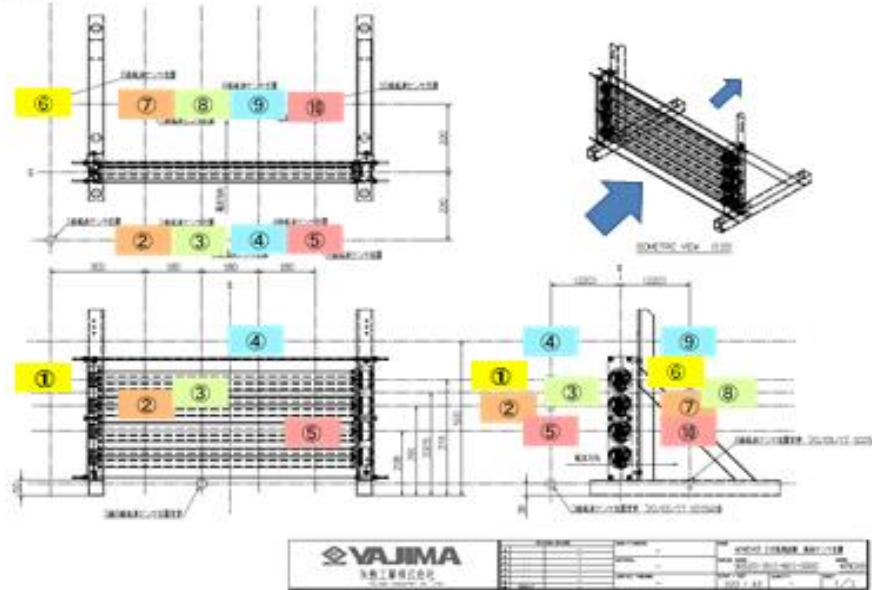

回転数	計測ポイント③→⑧				計測ポイント⑤→⑩			
	風速(風上)	→	風速(風下)	減衰率	風速(風上)	⇓	風速(風下)	減衰率
rpm	m/s		m/s	%	m/s		m/s	%
502	5.71	→	3.76	-34.2%	5.66	⇓	3.46	-38.9%
712	6.10		3.86	-36.7%	6.05		3.42	-43.5%
810	6.00		3.27	-45.5%	6.10		3.42	-43.9%
900	6.49		3.37	-48.1%	6.54		4.20	-35.8%
1,012	8.00		4.54	-43.3%	8.10		4.49	-44.6%
1,102	8.98		4.34	-51.7%	9.13		6.10	-33.2%
1,215	10.25		4.54	-55.7%	10.44		5.56	-46.7%
1,320	11.03		5.95	-46.1%	11.22		4.10	-63.5%
1,425	11.66		6.59	-43.5%	11.76		3.90	-66.8%
1,515	11.96		7.32	-38.8%	12.20		3.90	-68.0%
1,612	12.74		7.66	-39.9%	13.08		4.29	-67.2%
1,725	13.42		7.81	-41.8%	13.91		4.44	-68.1%
1,807	13.96		8.83	-36.7%	14.54		4.39	-69.8%
1,897	15.27		9.22	-39.6%	16.10		5.17	-67.9%